




Samsung DV300F Back LCD Screen Replacement

This guide will serve as a replacement guide for the Back LCD.

Written By: Timothy Gordon

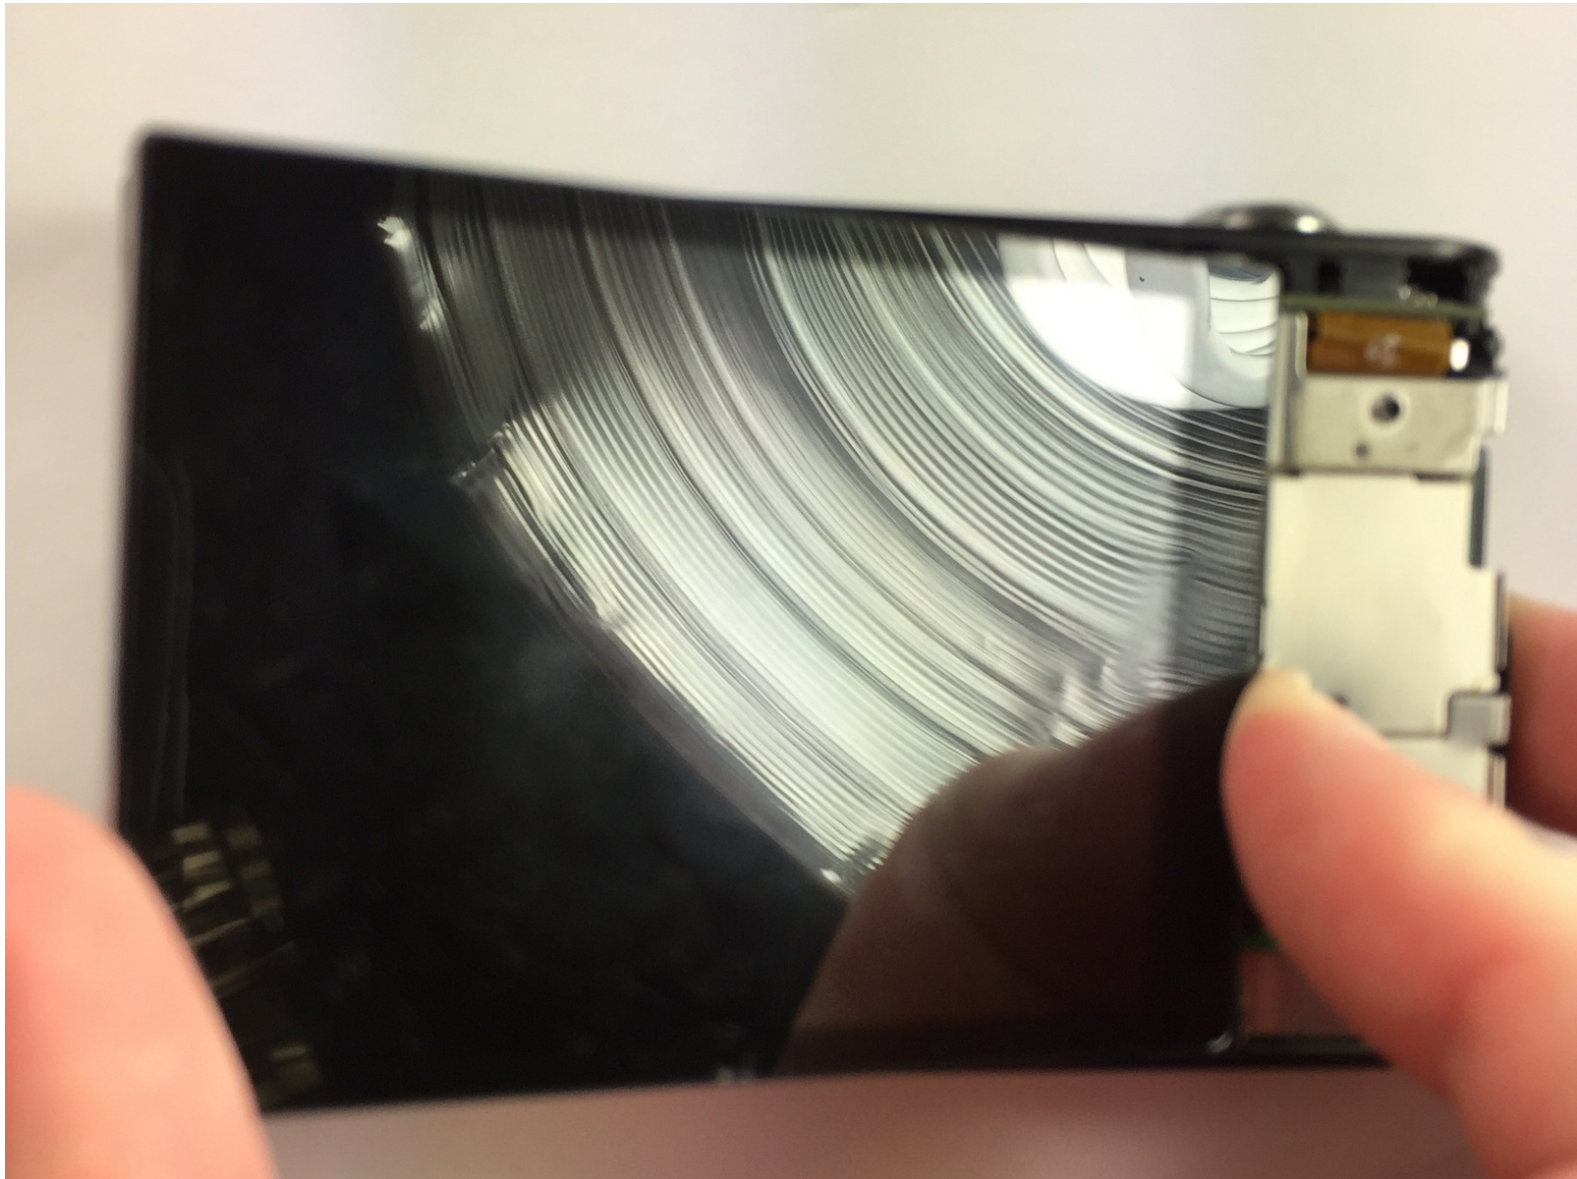

INTRODUCTION

This guide will show how to remove the Back LCD Screen.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Front and Rear Casing




- Remove the two black Phillips 4.2mm on the right side of the camera by using a #0 screw
- Remove the two black Phillips 4.2mm on the left side of the camera by using a #0 screw
- Remove the black Phillips 4.2mm on the bottom of the camera by using a #0 screw

Step 2




- Take off the back case of the camera gently

Step 3

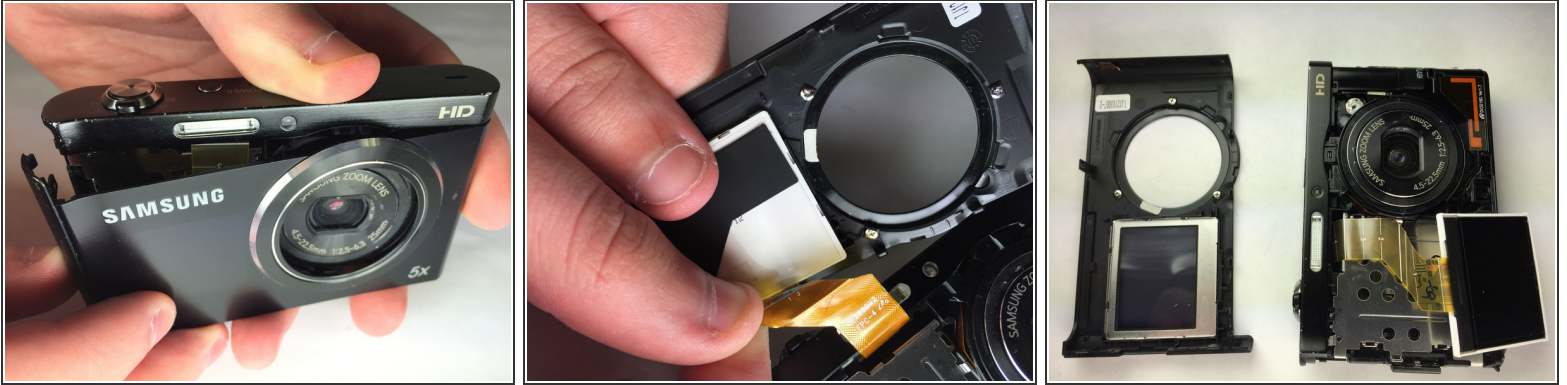



- Take off the front case of the camera gently
- Take off the front LCD gently, so the front casing is completely free

Step 4 — Back LCD Screen

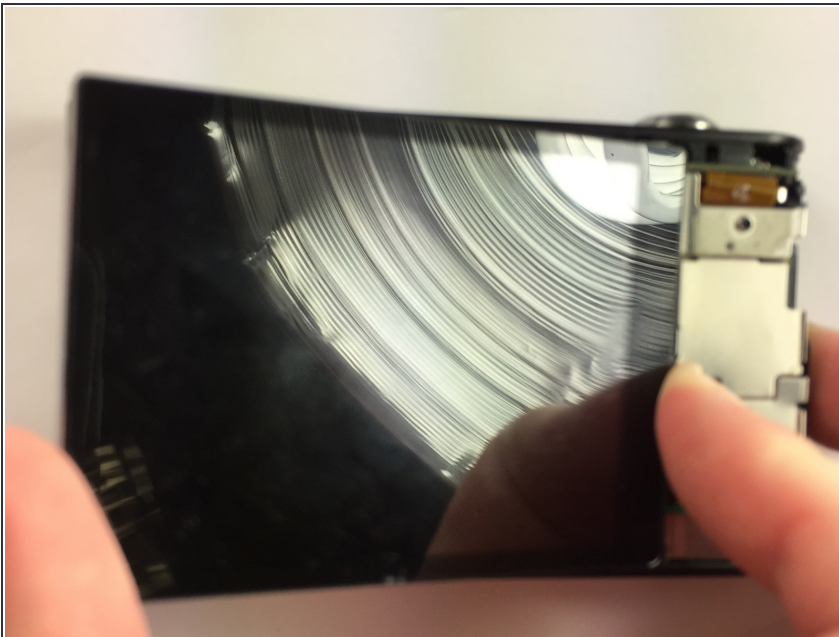

- Remove the Back LCD screen from its nest.

Step 5

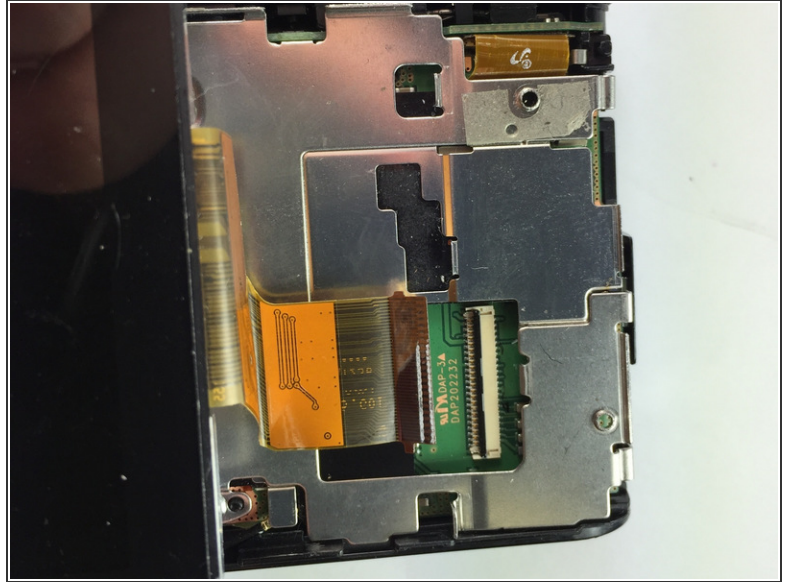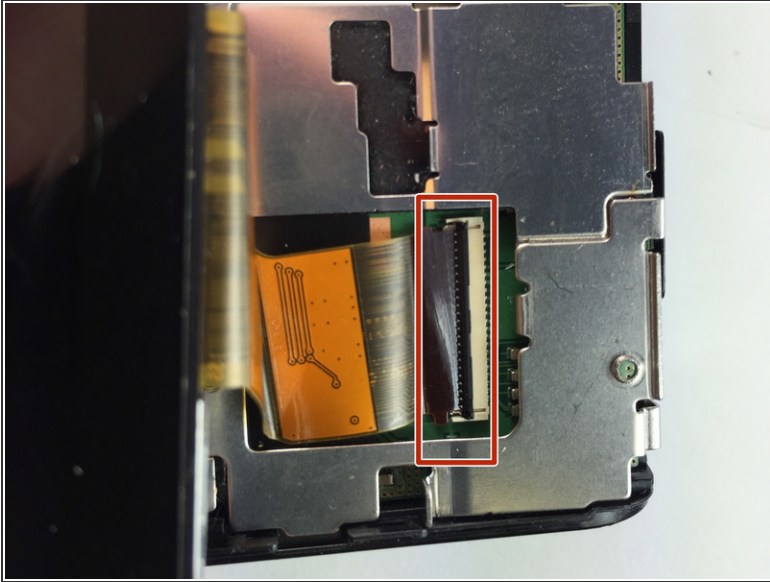

- Flip the black tab where the Back LCD screen connects to the circuit board
- Pull the tape connection to disconnect the Back LCD screen from the circuit board

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-10-03 09:30:37 AM.